

SUSPENSION SETUP

		HiFi				HiFi 29er				
		HiFi, GS, Plus, DLX, DLX GS (RP2)		Pro, Carbon, Carbon Pro (RP23)		HiFi Plus 29, DLX 29 (RP2)		HiFi Pro 29 (RP23)		
Travel (mm)	116		116		100		100			
Stroke (mm)	50		50		50		50			
Sag (%)	25		25		25		25			
Sag (mm)	12		12		12		12			
Rider (lbs / kg)	Spring (psi)	Rebound	Spring (psi)	Rebound	Platform No. Setting	Spring (psi)	Rebound	Spring (psi)	Rebound	Platform No. Setting
100 / 45	75	7 clicks out from slow	75	7 clicks out from slow	Start in #2 Position. Adjust per desired efficiency (3 for more platform, 1 for more active)	45	7 clicks out from slow	45	7 clicks out from slow	Start in #2 Position. Adjust per desired efficiency (3 for more platform, 1 for more active)
110 / 50	83		83			50		50		
120 / 55	90		90			65		65		
130 / 59	98		98			72		72		
140 / 63	105		105			80		80		
150 / 68	113	5 clicks out from slow	113	5 clicks out from slow		90	5 clicks out from slow	90	5 clicks out from slow	
160 / 73	120		120			100		100		
170 / 77	128		128			110		110		
180 / 82	135		135			115		115		
190 / 86	143		143			118		118		
200 / 90	150	3 clicks out from slow	150	3 clicks out from slow		120	3 clicks out from slow	120	3 clicks out from slow	
210 / 95	158		158			125		125		
220 / 100	165		165			135		135		
230 / 104	173		173			140		140		
240 / 109	180		180			145		145		
250 / 113	188	188	150	150						